

1 Select Workspace

The displayed detail can be selected with the selection rectangle in the Thumb View and the scrollbars. The zoom factor can be changed using the slide control in the Thumb View or the magnifier tools.